

Shortcuts

HATHOR / Setup / Preferences / User Interface

AlphaKeys ('A'-'Z') shortcuts

| Touche(s) | Fonction | Pavé Numérique |
|--------------|-----------------------------|----------------|
| (C) | Channel | (-) |
| (Backspace) | Clear | |
| (A) | ALL | (SHIFT)(-) |
| (F) | FRAME | |
| (I) | INVERT | (SHIFT)(/) |
| (L) | AT LEVEL | (+) |
| (F2) | SAVE | |
| (F3) | OPEN LIBRARY | |
| (F8) | UPDATE | |
| (F7) | RECORD | |
| (+) | ADD CHANNEL | (*) |
| | SUBSTRACT CHANNEL | (SHIFT)(*) |
| (T) | THRU | (/) |
| (CTRL)(F4) | TRACK | |
| (CTRL)(G) | GO | |
| (CTRL)(P) | PAUSE | |
| (CTRL)(B) | GO BACK | |
| (CTRL)(S) | Stage/Field mode | |
| (CTRL)(F) | FETCH | (SHIFT)(+) |
| PATCH | | |
| (C) | Channel | |
| (M) | Connect to dimmer | |
| (D) | Dimmer | |
| (H) | Connect to Channel | |
| (N) | Connect to Channel | |
| (G) | Goto Next | |
| (V) | live mode | |
| (SPACE BAR) | Check or uncheck Channels / | - |
| (←)(→) | dimmers in live mode. | - |