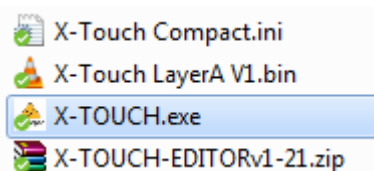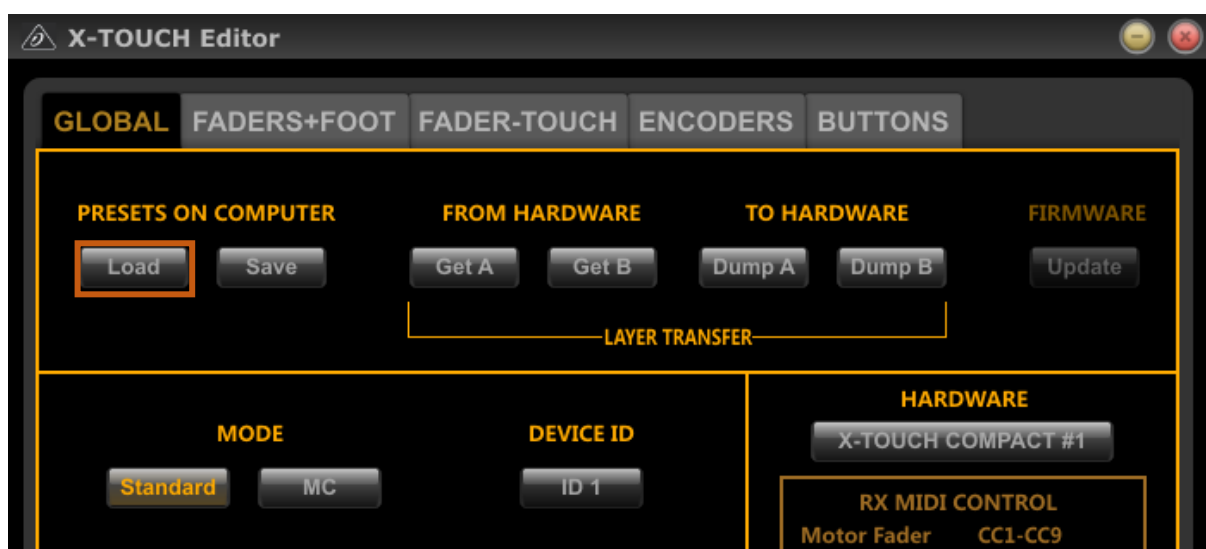## MIDI BEHRINGER X-TOUCH CONTROLLER INSTALLATION GUIDE

- Once downloaded, unzip the folder.
- You'll find all the files you need to install/set up the Behringer X-Touch consoles.

X-Touch Compact.ini
X-Touch LayerA V1.bin
X-TOUCH.exe
X-TOUCH-EDITORv1-21.zip

- **Connect the console to the PC**
- Let Windows connected to the Internet detect and install drivers
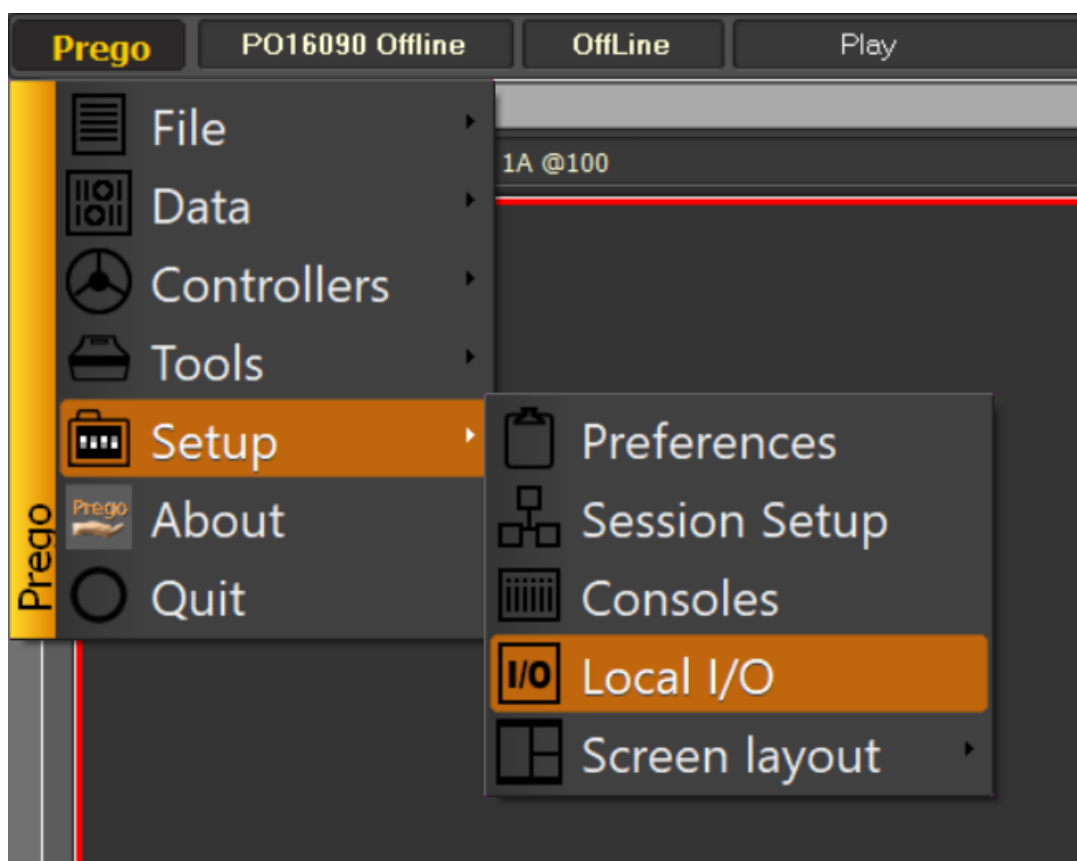- Install and launch the publisher X-Touch.exe

- LOAD then navigate to the location where you unzipped the X-TouchTouchfiles.
- Open the X-Touch LayerA V1.bin file, which loads the layout into the program.
- To send it now to the console, click ON DUMP A, which sets up the layout A buttons and faders:
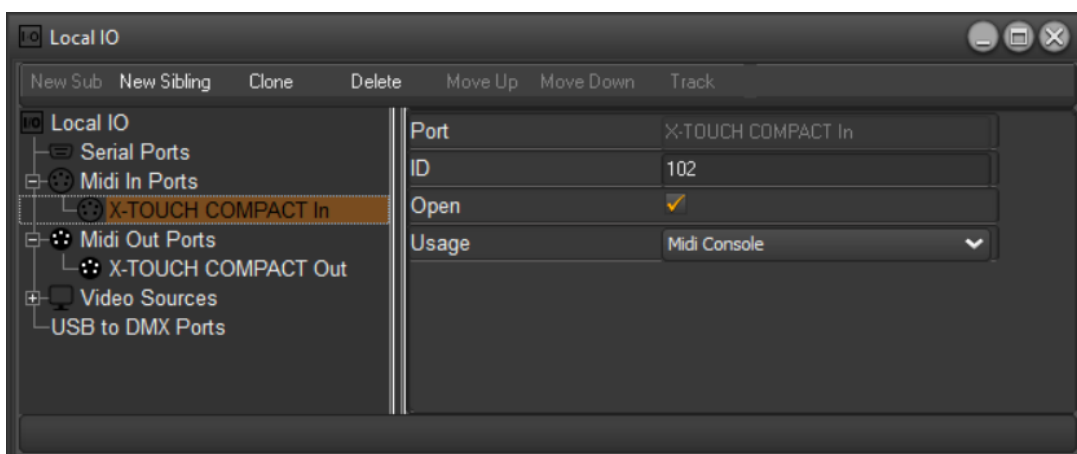

You must now close this application before continuing, otherwise the communication with Prego will not be possible!!

- Start Prego 2.3.11.0 or higher
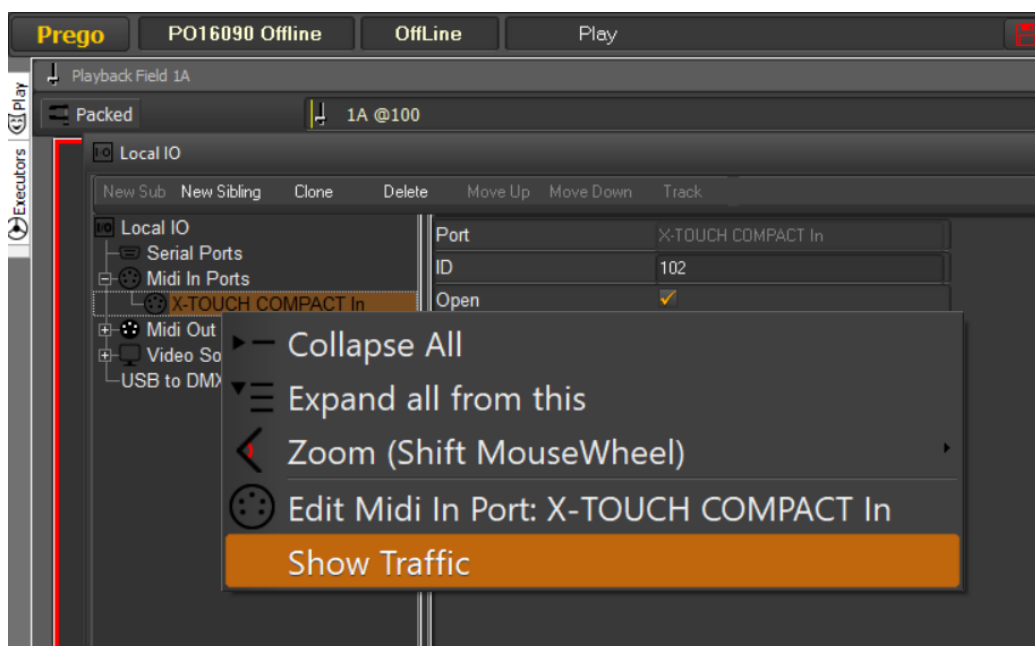- Go tol Menu / Setup / Local IO

- The X-Touch will now appear in MIDI IN. Click below :

- Enter 102 in the ID field
- Check Open and choose MIDI Console from the list below
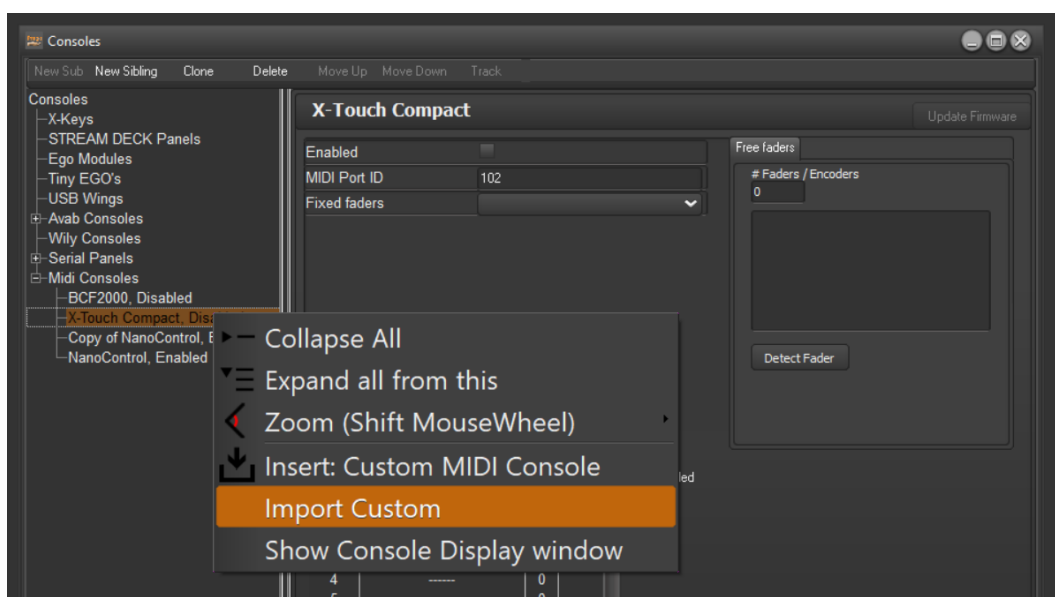- Do the same for MIDI Out

- During your tests if you want to check incoming or outgoing MIDI data, you can view traffic:
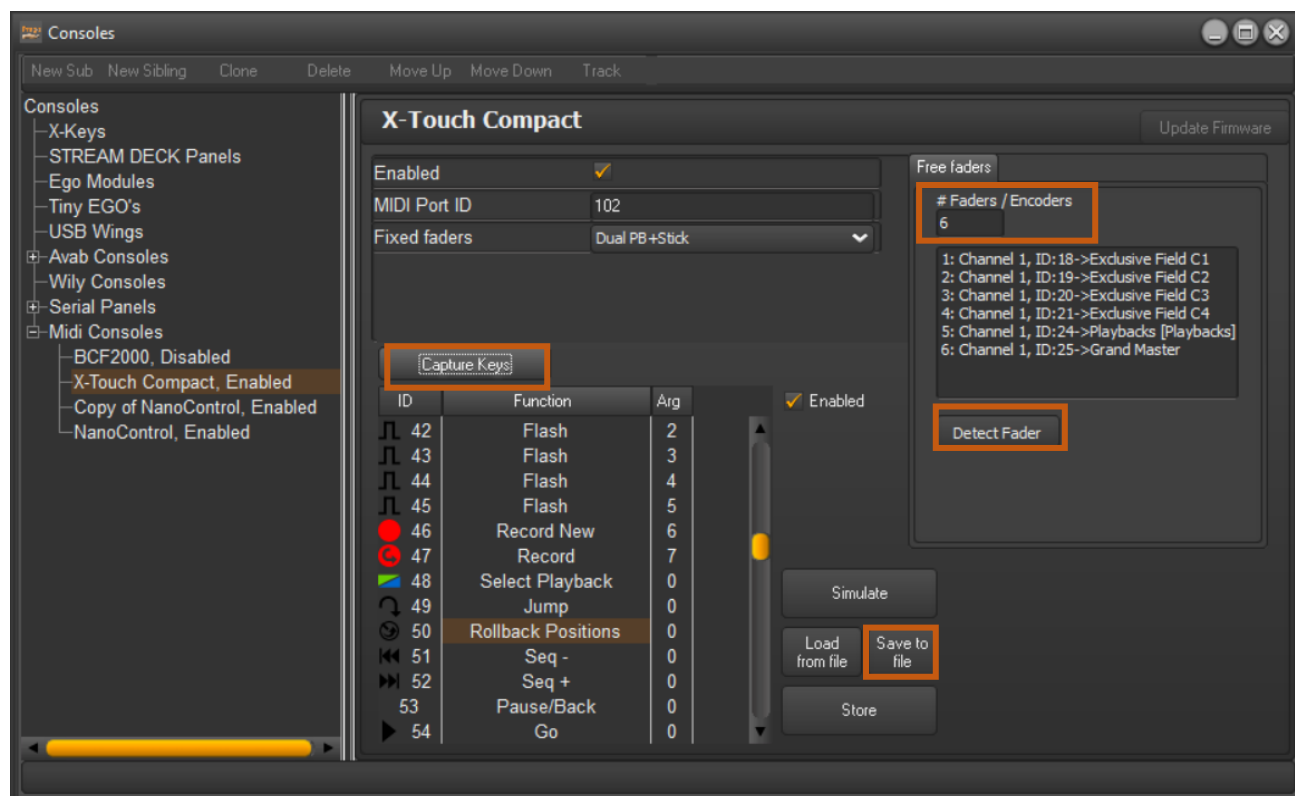

- Go to menu Prego / Setup / Consoles

Only if X-touch Compact is not present in the MIDI Console list

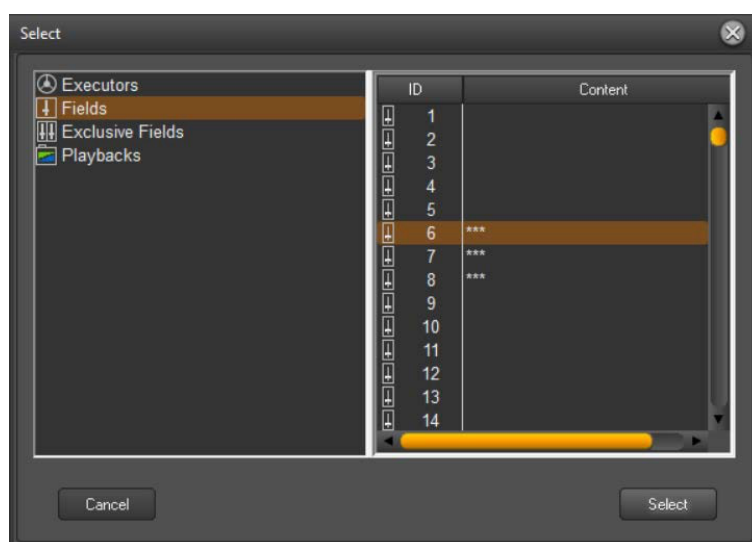- In MIDI Consoles, right click on X-Touch Compact then Import Custom,

Browse to the folder containing the **X-Touch Compact.ini** file and open it.

You can of course then adapt the functions to the buttons as you please, going through Capture Keys, and assign another function.
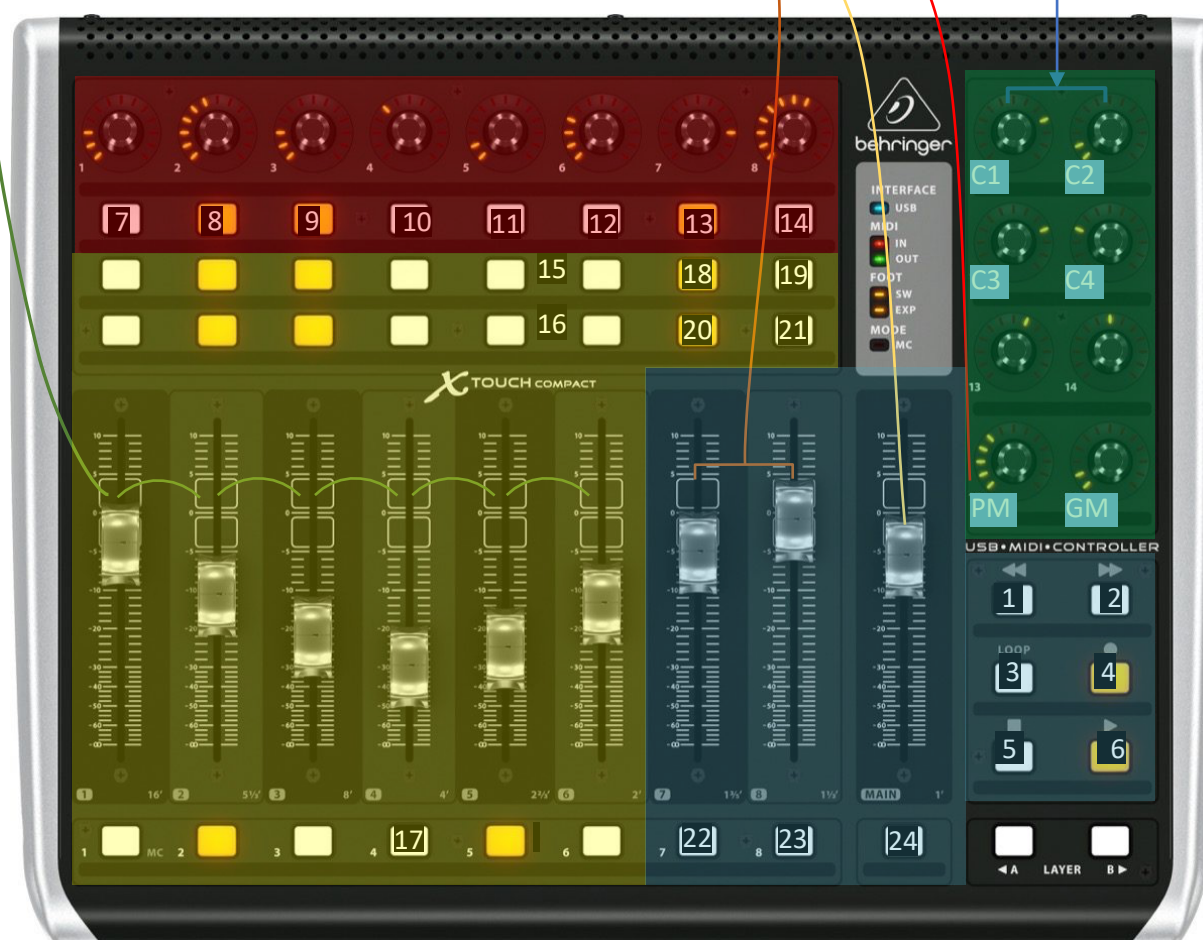
You can change/add the functions of faders /encoders via the Detect Fader key

Just change the amount of Free Faders in the field #Faders / Encoders, then select one of the lines created below, move the fader / encoder, finally assign it a function by double clicking on the line concerned.

This configuration affects:

- The faders from 1 to 6 at fields 1 to 6 in Bank 1
- les 2 faders 7 et 8 au Crossfade du Playback 1.
- The fader 9 at Intensity / Speed Control
- the first 4 encoders from top right to Exclusive Fields C1 and C2
- The last 2 encoders at the PlaybackBack Master & Grand Master

The keys Command

1. JUMP
2. ROLLBACK
3. SEQ -
4. SEQ +
5. PAUSE/BACK
6. GO
22. REC NEW
23. REC
24. SELECT PLAYBACK

Banks Settings

Clickable encoders
7. FOCUS
8. COLOR
9. BEAM
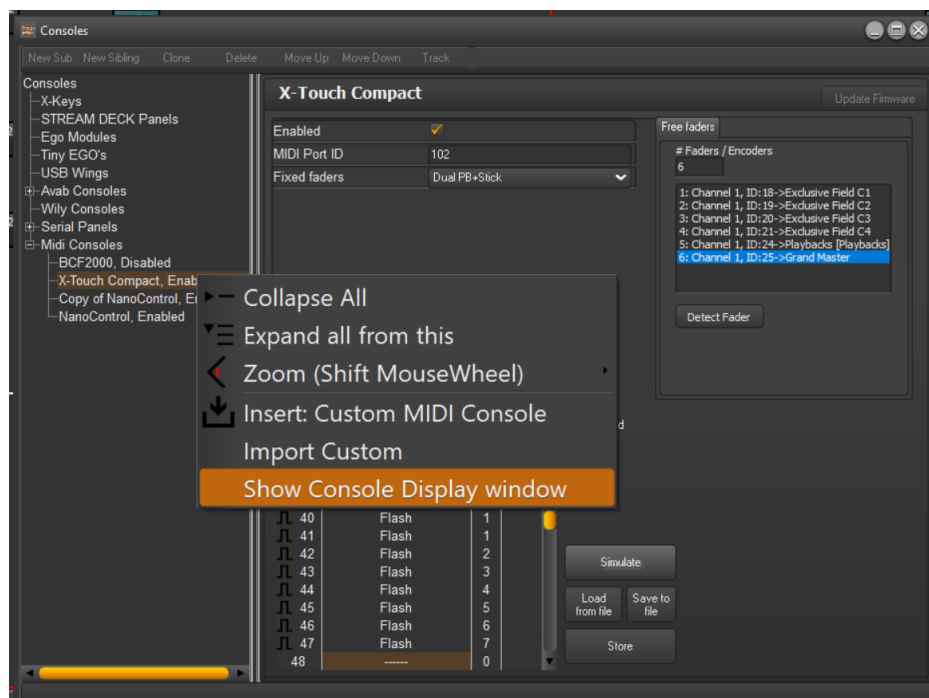10. PATTERN
11. EXTRA
12. DYNAMIC
13. ALL
14. COPY ATT

The keys Faders

15. ASSIGN
16. START
17. FLASH
18. FADER BANK –
19. FADER BANK +
20. RATE
21. LOAD

Once you've finished your setup, consider clicking On **Store** to keep these changes on the next restart.

If you need to export this configuration to other PCs click the Save to File button, to save it to your hard drive or a USB stick.

Finally, it is imperative to open the control window dedicated to this console by making a right click on the console concerned on the left.

What opens this window:

Dock it in a sub-screen of your choice.

The settings displays correspond to the settings of the encoders from 1 to 8 at the top, dynamically allocated according to the current selection.